

CONGRATULATIONS!

Like thousands of Nomadic Display owners around the world, you now own the highest quality portable/modular display. Your Nomadic display is specially designed to give you the ultimate in versatility. The frame system integrates to meet your growing exhibit demands. And your 100% satisfaction is guaranteed by Nomadic.



The Lifetime Warranty
Your FabLite frame is guaranteed for life. If it ever fails to function Nomadic Display will repair it free of charge for as long as you own it. Be sure to complete and return the enclosed warranty card immediately.

Made by Nomadic Display
Superior in design and strength, your Nomadic Display is built in Nomadic's own manufacturing plants in the U.S. We use only premium grade materials and take pride in maintaining the highest standards of craftsmanship. Your display is delivered to you packed for maximum protection and quick assembly.



Nomadic Cares, Please Recycle
All Nomadic aluminum frames and cases can be recycled.

We recommend that you assemble and repack your display prior to your first event. It is important to follow each step in the order indicated. If you need additional assistance or have any questions, please call your nearest Nomadic LifeLine:


North America:
800.732.9395

Ireland/Europe:
+ 353.1.208.7261

United Kingdom:
07699 734215

TABLE OF CONTENTS

Setup Instructions	
☐ Tombstone Kiosk	2
Notes	
☐ Additional Notes	4

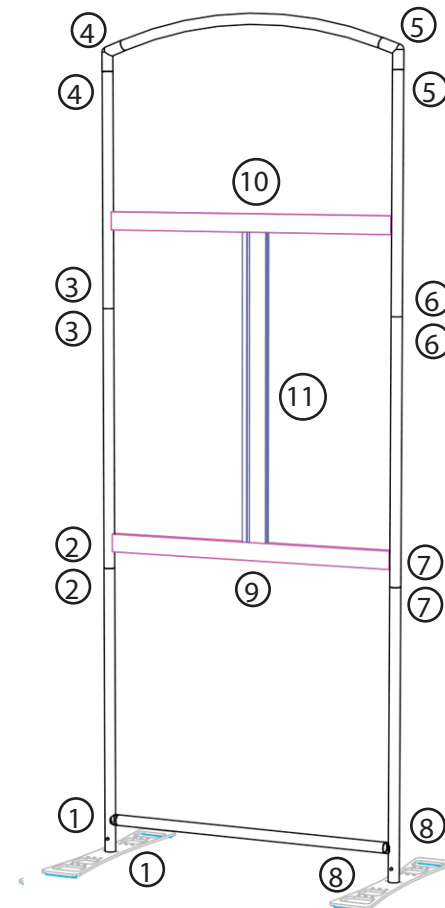


Tombstone Kiosk • 2


Setup Instructions



Lay out all parts.

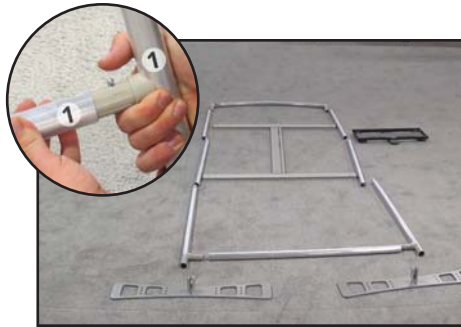

Align like numbers in sequence. Align #1 to #1 and #2 to #2 and so on.

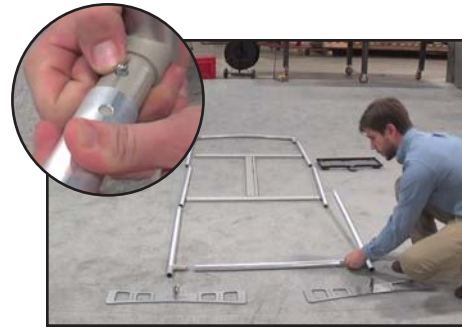

Connect BOTTOM portion. Insert tube until button lock engages.




Insert tube until button lock engages on the other side.




Connect the side tubes. Insert tube until button lock engages.




Insert tube until button lock engages on the other side.

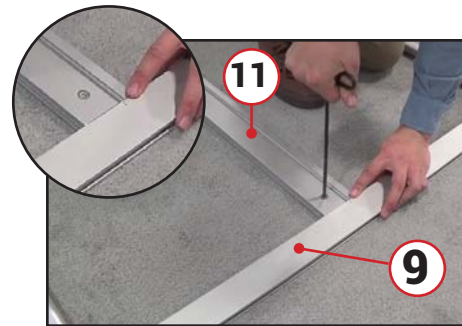


Align part #11 to part #9 and secure CAM Lock using hex key.

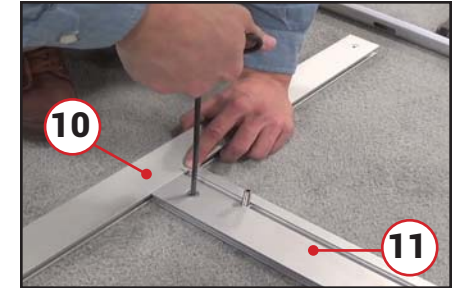

Align part #10 to part #11 and secure CAM Lock using hex key.

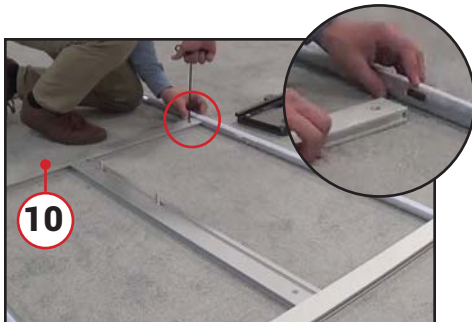


Insert part #10 into hole on the side tube and secure CAM Lock using hex key.

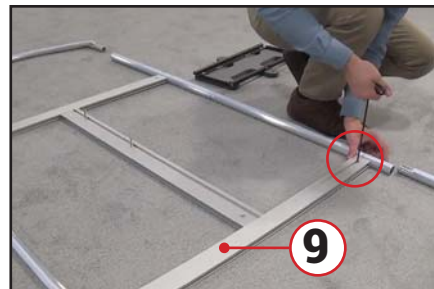

Insert part #9 into hole on the side tube and secure CAM Lock using hex key.



Insert part #10 into hole on the other side tube and secure CAM Lock using hex key.

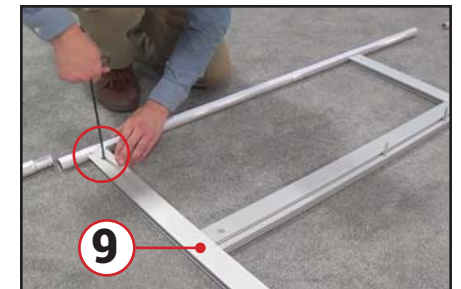


Insert part #9 into hole on the other side tube and secure CAM Lock using hex key.

Note: Use drop cloth and gloves provided in CAREKIT to prevent soil to graphic.


Revised: 1/27/17 758 Industrial Drive • Elmhurst, IL • 630-834-8773 • www.prairiedisplay.com

Prairie
DISPLAY / CHICAGO, INC.



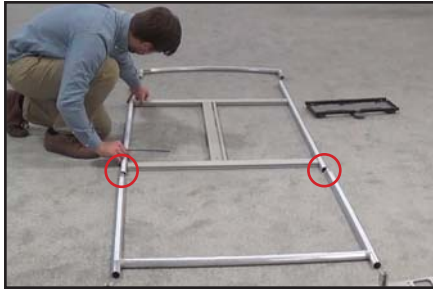

Insert **BOTTOM** of the frame until button locks engage.

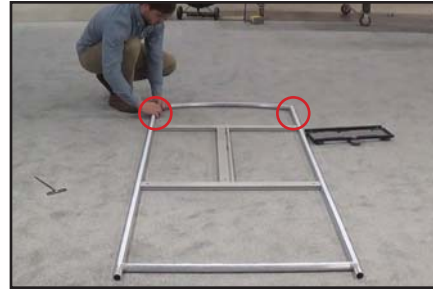


Insert **TOP** of the frame until button locks engage.
*Note: Velcro® strips should face up around the whole frame.



Attach liner to Velcro® at the **BOTTOM** corner and continue around the frame.



Continue attaching the liner with some tension.

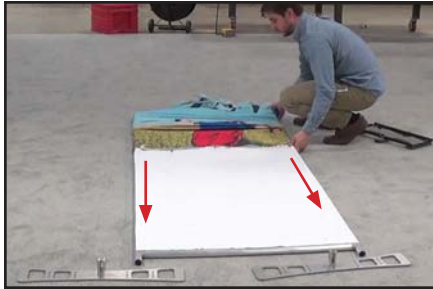

Slide graphic over the frame and liner.



Zip graphic at the **BOTTOM**.




Attach the feet. Remove thumb screw. Squeeze and insert foot. Repeat for the other foot.



Secure feet with thumb screws and lift kiosk.



Add monitor mount to kiosk.

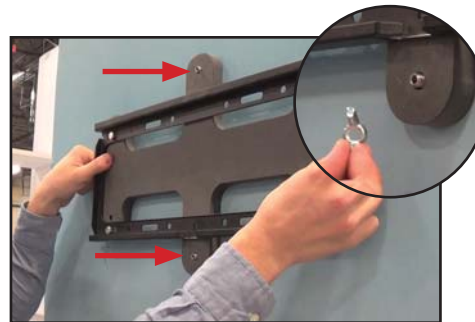

Place monitor mount onto studs coming through liner and graphic. Secure with wingnuts on **TOP** and **BOTTOM**.



Hang monitor onto the monitor mount.



Your FabLite Kiosk is complete.

Note: Use drop cloth and gloves provided in CAREKIT to prevent soil to graphic.

Revised: 1/27/17 758 Industrial Drive • Elmhurst, IL • 630-834-8773 • www.prairiedisplay.com

Prairie
DISPLAY / CHICAGO, INC.



Note: Use drop cloth and gloves provided in CAREKIT to prevent soil to graphic.