



## Setting Up Your Display




Place frame with red studs facing front.

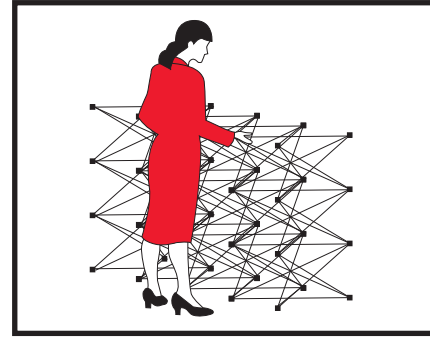


Grasp two top center hubs and lift frame open to shoulder height. Handle frame at hubs only.

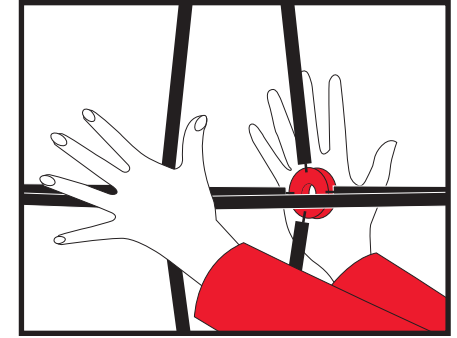


Press front and back hubs in the center of the frame until Instand locks into position. (Front and back hubs do not meet.)\*

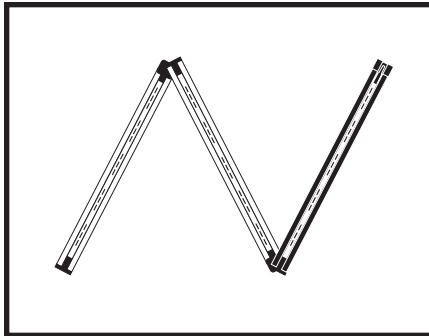


Unfold connected strut insuring magnets are facing the same direction...

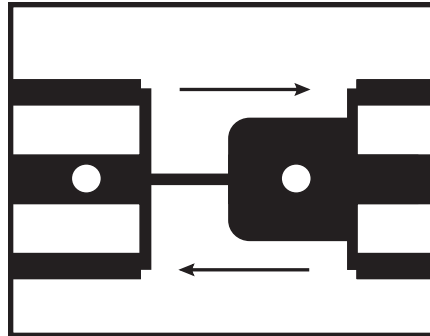


...and connect bottom two sections by joining as illustrated.

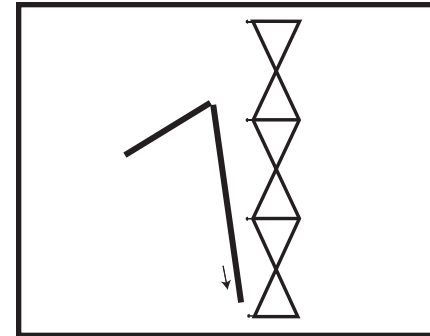


Slide bottom of connected strut onto the red stud at the bottom of the frame.

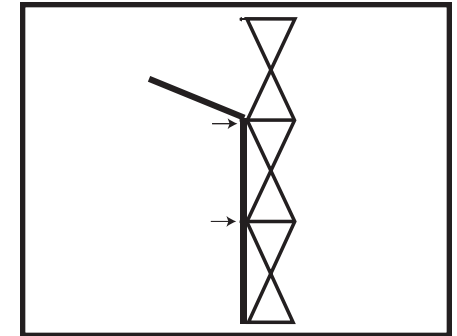


Snap next two connectors onto studs on frame.

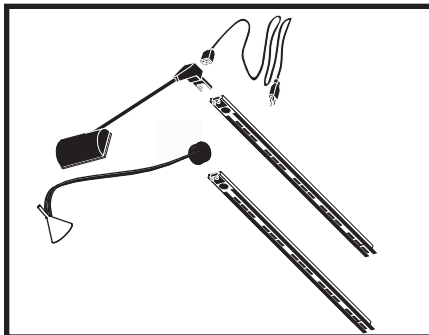

Attach lights to top of struts. Swivel fixtures to adjust position. Run cord behind display.

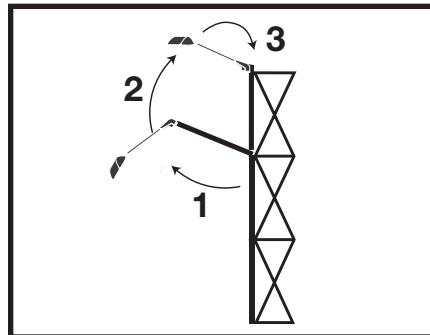

Rotate top section of strut up and slide down onto top stud.

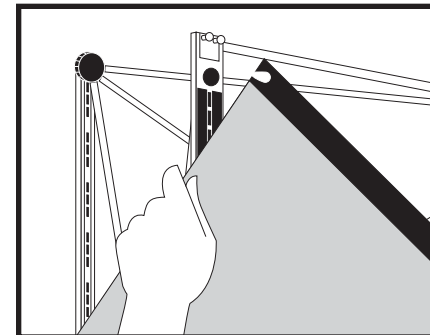


Hang all top panels and full size panels first. Lift onto studs atop frame. Hook one side then the other. Gradually release downward to bond magnets.




Bow endcaps and lift onto studs atop both sides of frame. For hinged panels hook one side then the other. Slide hands along length of panel to bond magnets.

# Rolluxe Case


## To remove top and set a new combination

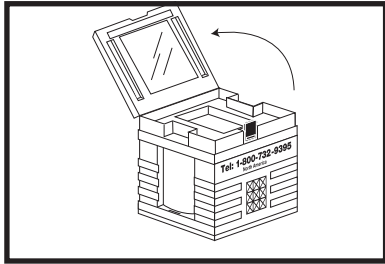


To open lid set your combination at "000".  
To set a new combination...

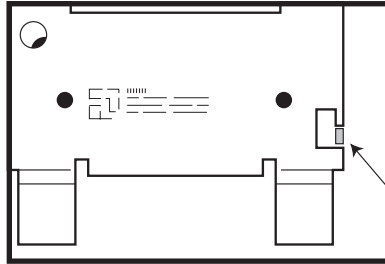


...look at the back of the lock between the latch and the case to locate the silver change lever.

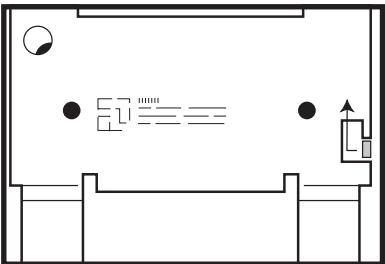


Use a hard object to push the silver change lever in towards the center of the lock and then up towards the lid.

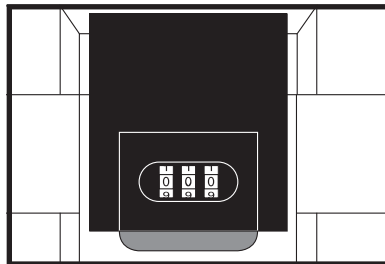

Set your new combination by turning the dials downward on the front of the lock

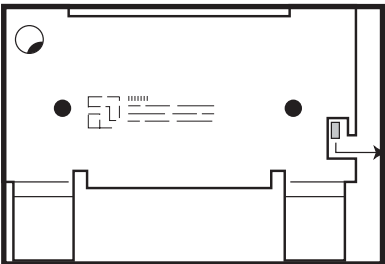

Return the silver change lever to its original position. Your new combination is now set.

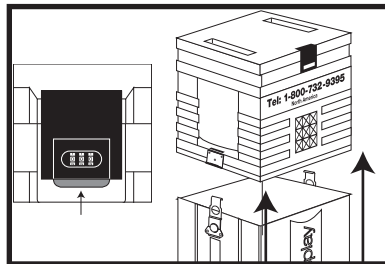


Press red button to release side latches and remove the top. **Note:** You may want to change all combinations to match.

### REMEMBER-

Write your personalized combination down for your records and provide it to your I & D company prior to shipping the display.

## To use built-in step stool

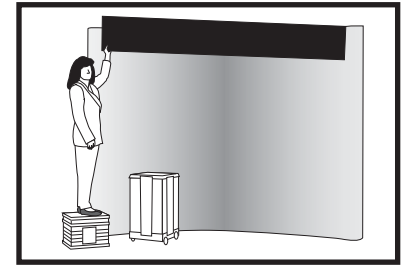

Rolluxe Case top serves as a built-in step stool to facilitate hanging graphics.




Make sure that step stool is on a level floor.



Do not wear high heels on step stool.




Step surface may be slippery when wet.

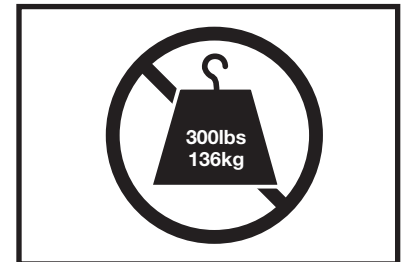

Do not place more than 300 lbs / 136 kg on step stool.

## To close and move Rolluxe case

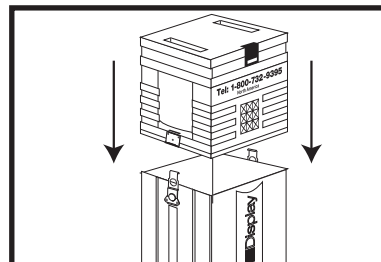


Align handle with wheels, snap and lock exterior latches. Scroll down the combination locks.



Grip top handle with one hand and the retractable handle with the other to lift case. Remember to always bend your knees.

Remove all accessories

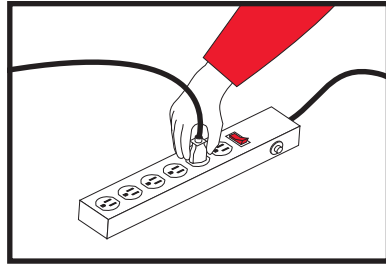


Switch off and unplug all lights.  
Allow them to cool.




Gently remove and roll up all  
surface graphics.

## Dismantling Instructions


Remove and roll up  
FabriColor and  
Photomural Strips:

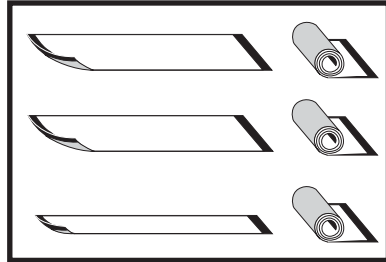

Roll individual **Ribbed** Panels fabric side  
out. Roll Fronrunner End Caps fabric  
side out.

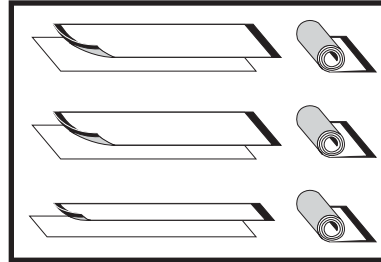


Roll individual **Smooth** fabric or  
**Graphic** Panels with liners in between  
and roll fabric/image side out. Repeat  
same for End Caps.

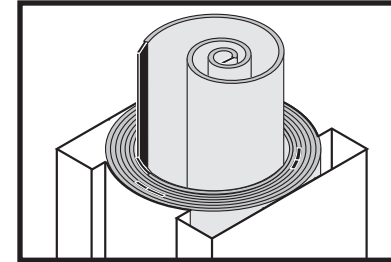


Put rolled panels into case one at a time and  
one inside another. The top stiffener of one  
panel should touch the bottom stiffener of  
the previous panel. Stack Endcaps two high.


Remove Magnetic Struts  
and Collapse Frames:

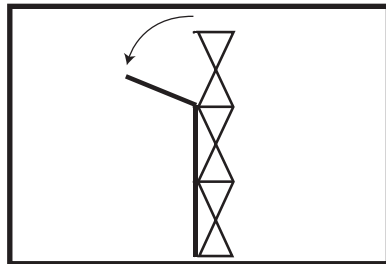


Lift top section of strut up. rotate down.  
Remove all lights.

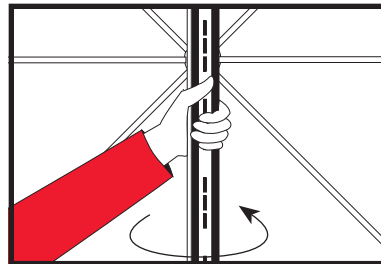


Twist strut to unsnap from frame.

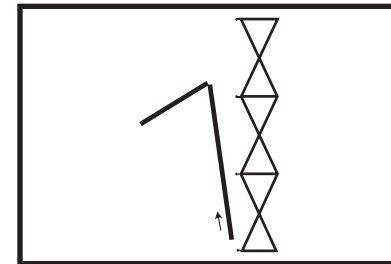


Lift bottom of strut off bottom stud.

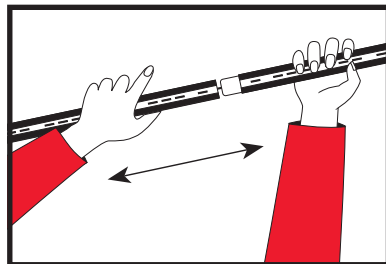

Pull strut sections apart.

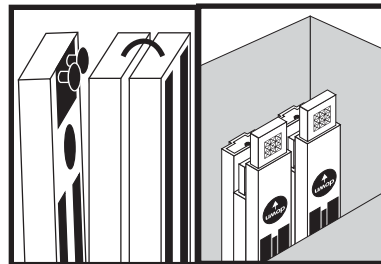


Fold lengthwise ensuring that pegs at  
top of strut face inward. Place connected  
struts upside down in case.

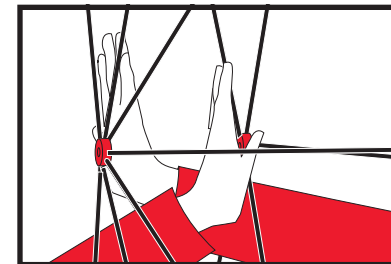


Push on middle hub at back of frame while  
pushing on corresponding front hub. Instand  
will sink to the floor. Handle frame at hubs.


## Setting Up Your Rolluxe Pedestal

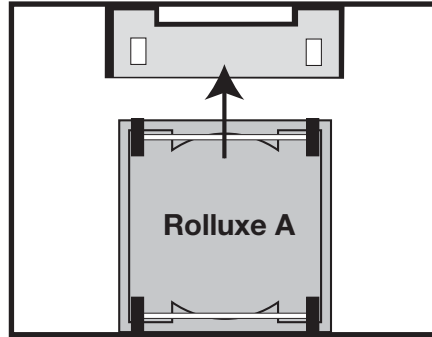


Place one wheel stop on the floor and roll the case onto it.

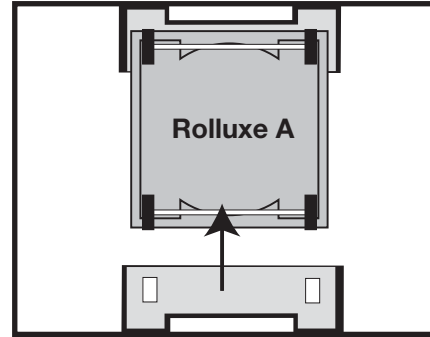


Place second wheel stop on the floor under the opposite wheels.

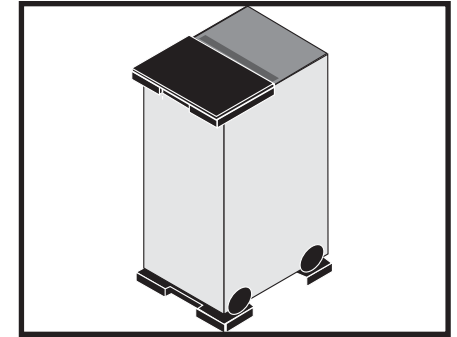


Place the plastic top shelf half with exposed magnetic lip on top of the case.

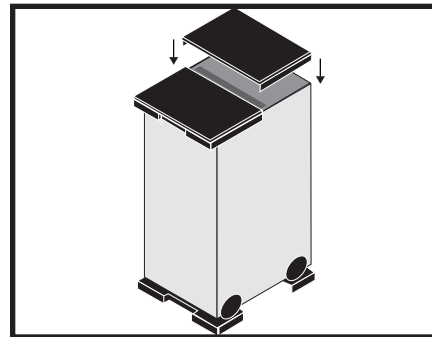


Place the second plastic top shelf half on top of the case, ensuring magnets are aligned and engaged.

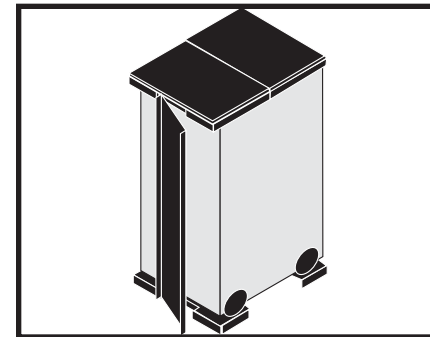


Attach front fabric panel to Velcro at top and bottom. Form a straight line with magnets on front panel before attaching end caps.

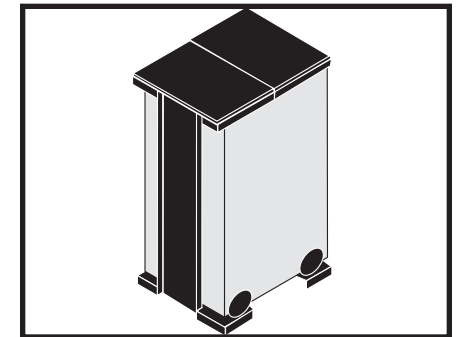


Repeat on opposite side.

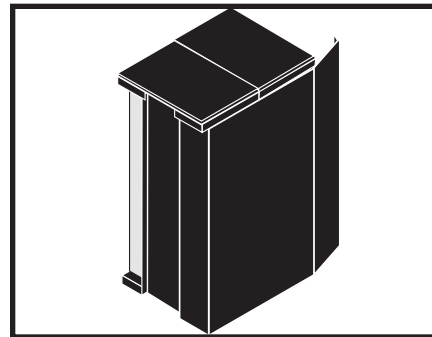

Attach fabric end cap by starting at corner...

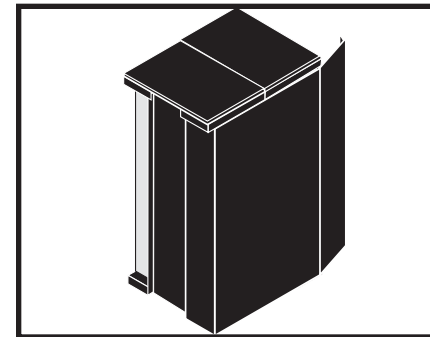


...wrap end along top edge then bottom edge. Slide hands along length of edge of end cap to bond magnets.


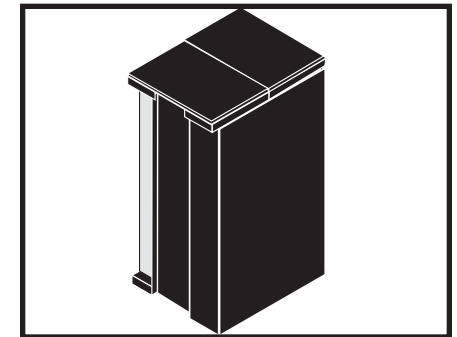


Repeat with last end cap. Pedestal load is 100 lbs / 46 kg; a heavier load may cause failure.


# Setting Up Your Rolluxe Counter

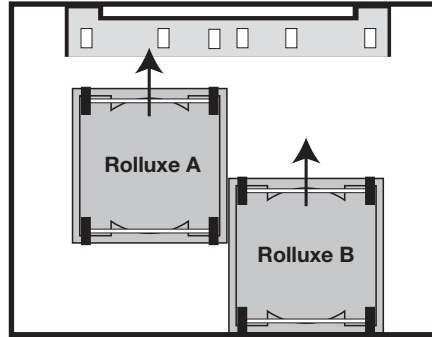


Place one wheel stop on the floor and roll the cases on to it.

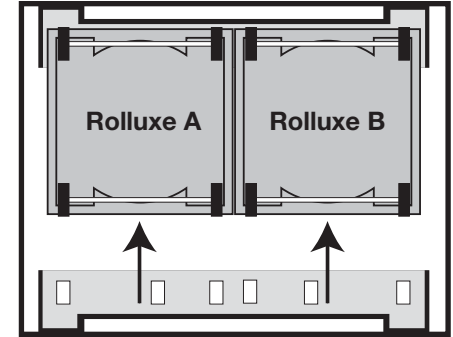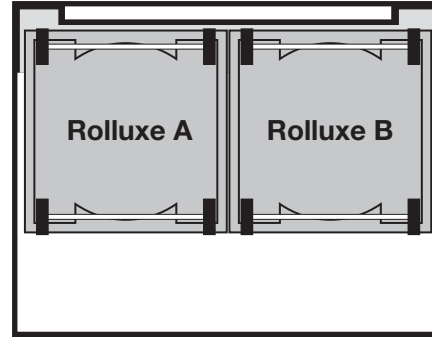


Place second wheel stop on the floor under the opposite wheels.

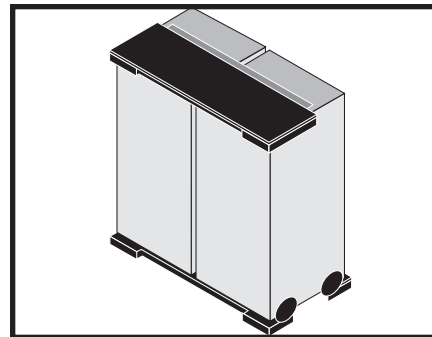


Place the plastic top shelf half with exposed magnetic lip on top of the case.

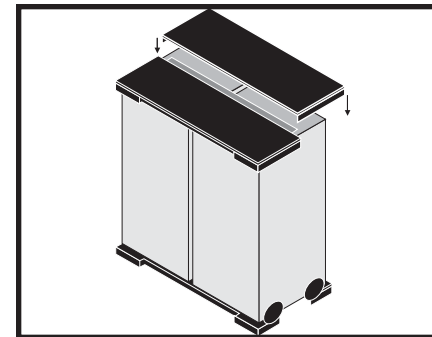


Place the second plastic top shelf half on top of the cases ensuring magnets are aligned and engaged.

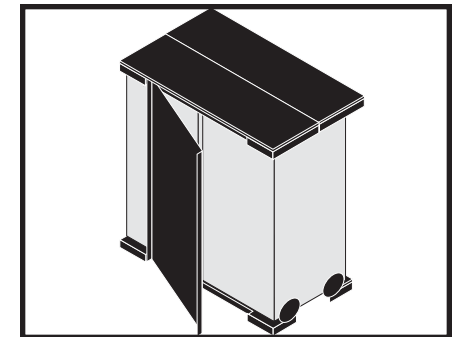


Attach front fabric panel to Velcro at top and bottom. Form a straight line with magnets on front panel before attaching end caps.

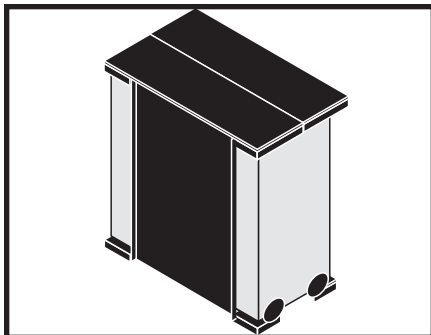


Repeat on opposite side.

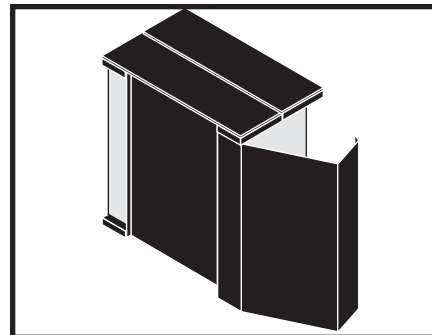

Attach fabric end cap by starting at corner...

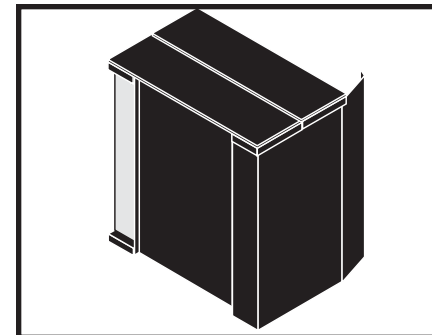

...wrap end cap along top edge then bottom edge. Slide hands along length of edge of end cap to bond magnets.

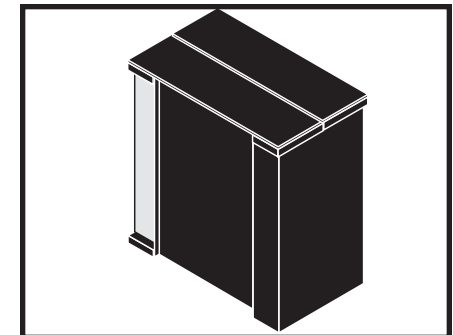

Repeat with last end cap. Counter load is 100 lbs / 46 kg; a heavier load may cause failure.